

## Coil Pack Connector Replacement

### Tools required

Mini flathead screwdriver



1- Start by disconnecting the connector(s) you'd like to replace.



2- Pry off and remove the black the wire holder on top of the connector ( 2 tabs on each side of the connector). Next, to remove the spades simply insert screwdriver into spade hole (circled in green in picture below) and pry away from the spade until the brittle plastic breaks and gently remove the spade (repeat step 2 one at a time) **\*\*Make sure you reinsert each spade into the exact position of the connector - do this one wire at a time.\*\*** Install the new retaining clip which is provided and repeat the process.

